

Installing CRS™ Wire to Your Frame



Remove polyester top from from assembly. Locate the adjustable corner cap at the very top of each corner leg and loosen set screw.




Slide the adjustable corner cap outward to allow the CRS wire to slide under.



Find the wire L shaped corner under the adjustable corner cap. Now slide corner cap to closed position to snug up the wire securely on all four legs.



Complete Corner attachment

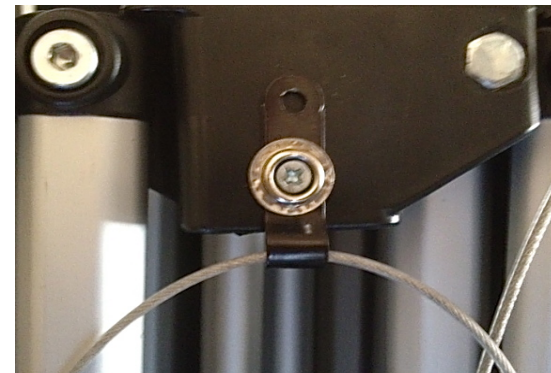

Black clips are applied at the middle mold. Un-Screw snap button, place snap button over clip and screw back into place.